



## Instructions

### Cotton Candy Machine

- Make sure motor is positioned in the center of the cart and switches are facing the opening.
- Plug the machine into a standard electrical outlet.
- Fill center of machine with approximately one cup or less of sugar.
- Moisten Whirl Grip (mesh screen) with a damp sponge. This process allows the floss to adhere to the side of the floss bowl.
- Turn motor switch ON and turn the heat switch to MEDIUM.
- Dampen cone slightly and twirl cone approximately 1” away from Whirl Grip. Do not stop twirling until machine is off.

**WARNING:** Do not put hand close to the center of the machine while operating.

- Work floss away from the center of machine. You may make several servings, approximately up to 10 at a time, but you will have to stop to allow the machine to cool to prevent sugar from burning.
- **Once you have made the servings, you MUST TURN THE HEAT SWITCH OFF FIRST. This step is critical to prevent sugar from clogging and burning.**
- Allow machine to cool for a few minutes.
- When you are ready to make more servings, repeat steps 5-9.
- When finished, TURN OFF HEAT SWITCH FIRST.
- When cool, turn OFF the motor switch.

## **Cleaning**

**Please do not attempt to clean this machine as problems may occur.**

## **Cotton Candy Supplies**

<b>SERVINGS</b>		<b>500</b>	<b>1000</b>	<b>2000</b>
<b>Floss Mix</b>	<b>½ gallon</b>	<b>10</b>	<b>20</b>	<b>40</b>
<b>Floss Cones</b>	<b>100 pack</b>	<b>5</b>	<b>10</b>	<b>20</b>
<b>Plastics Bags</b>	<b>100 pack</b>	<b>5</b>	<b>10</b>	<b>20</b>